



Chef Top / Baker Top Cleaning Instructions

Before we start the cleaning cycle:

Step 1

Use a damp cloth with mild detergent to wipe around the door seal. Clean around the inner glass panel where it rests against the door seal.




Step 2

Open the inner glass panel by lifting the upper catch and pushing down the lower catch that will release the glass which will swing open.



Step 3

Remove the drip tray on oven door by holding your fingers up inside the drip tray and using your thumbs to press against the door to unclip the drip tray. Handwash only.

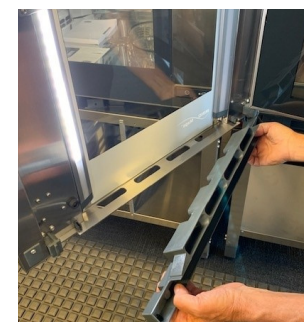

Wipe around the inner glass and between the front glass and inner glass if needed, replace drip trays and close the glass by gently pushing against the catches.





Chef Top / Baker Top Cleaning Instructions

Before we start the cleaning cycle:

Step 4

Clean drip tray below oven .
Hand wash only for all drip trays–
do NOT put through a dishwasher
and be careful not to break the
small spout.



Step 5

Check the detergent level in the
chemical drawer below the oven,
top up if necessary.
If the chemical is very low the oven
will show a message on the screen
to top up chemical.



Estimation
of chemical usage:

Quick	50ml
Short	100ml
Medium	200ml
Long	400ml

Code for the chemical: DB 1015 AO
delivered as a carton of 10 x 1 litre bottles

Step 6

Start the cleaning cycle:

Close oven door


Select **Roto Clean** from Home screen

Select **"Softening"**

Press **"Start"** to activate cycle

Oven will steam at 80 deg C to soften any fats etc

Select the desired cleaning cycle
(usually "Quick" is sufficient)

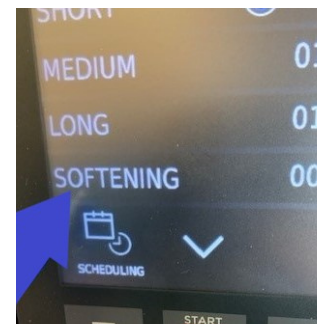

If you wish to stop the cycle:

Press and hold the Start/Stop button for a few seconds until you hear a beep,
the oven will now automatically do a rinse with clean cold water to remove
any chemical residue that may be in the oven chamber.