

CHEFTOP & BAKERTOP MIND.MapTM PLUS

 
Get started with your new UNOX oven





TURN ON THE CHEFTOP & BAKERTOP MIND.MapTM PLUS



To turn on the oven, lift the lid under the handle and press the power button.
Wait a few seconds for the oven to start up correctly.




BASIC FUNCTIONS

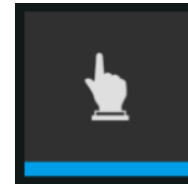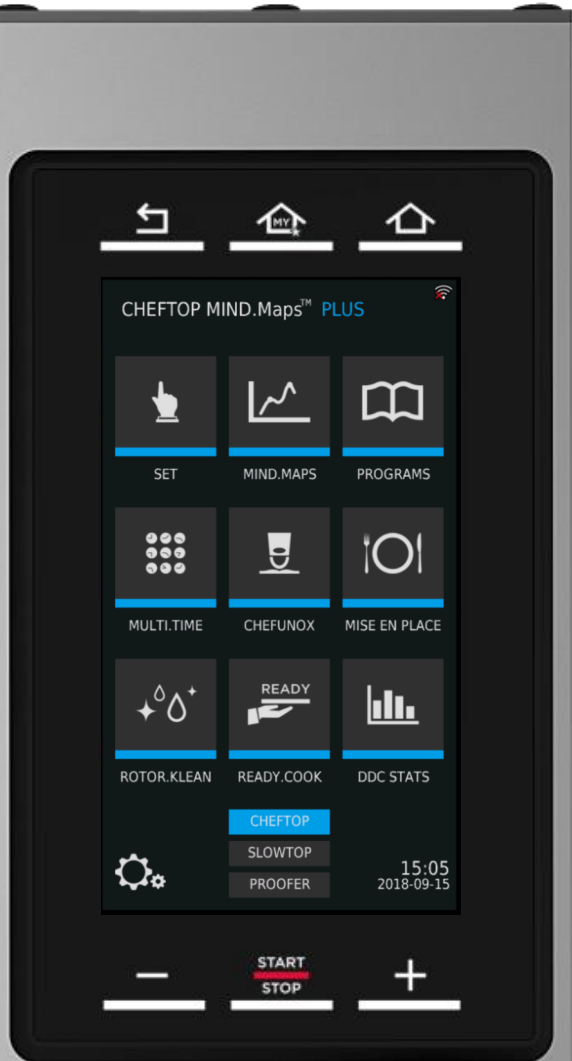  


MANUAL FUNCTIONS

 PERSONAL
PROGRAMS LIBRARY

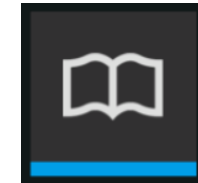


CHEFUNOX AUTOMATIC
PROGRAMS

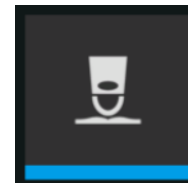 



SENSE.KLEAN™
AUTOMATIC WASHING



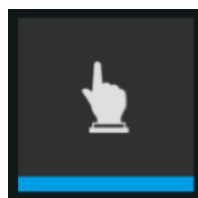 

MANUAL FUNCTIONS

  THE FUNDAMENTALS

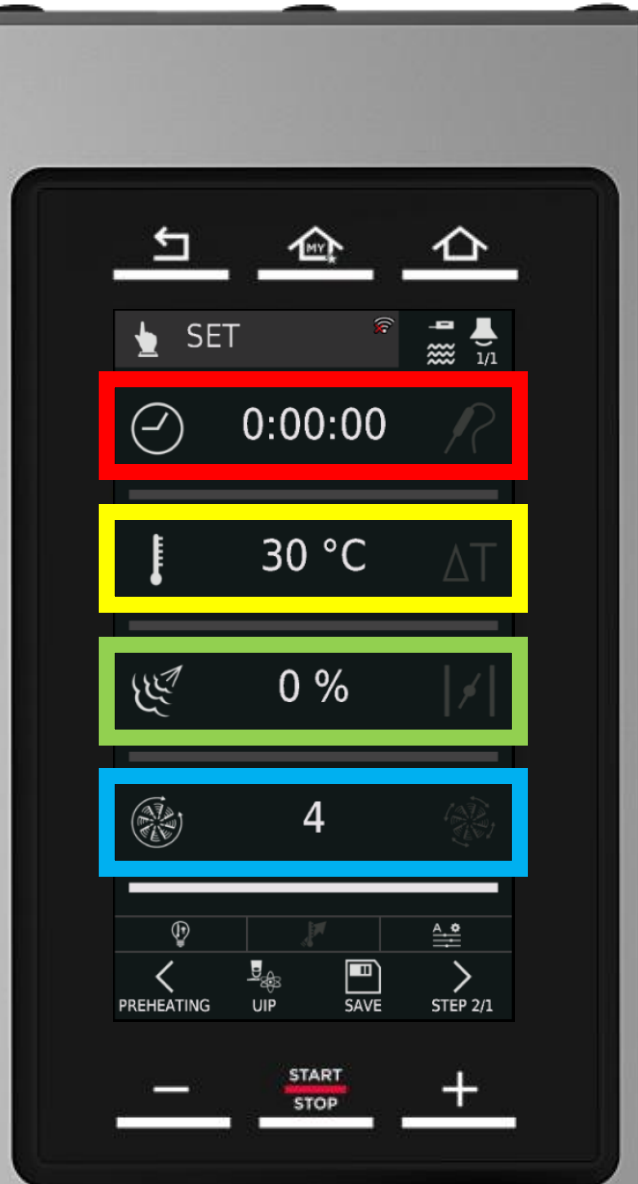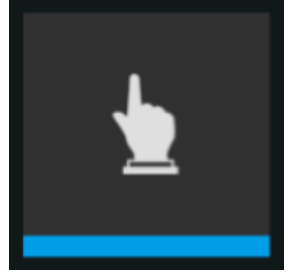

How long do you want to cook?



At what temperature do you want to cook?



Do you need humidity or dry heat?



Are you cooking a product that needs delicate ventilation?


BASIC FUNCTIONS

Set the time.

Set the temperature.

Set the humidity percentage.

Set the fan speed:
4: Very intense
3: Intense
2: Medium
1: Delicate

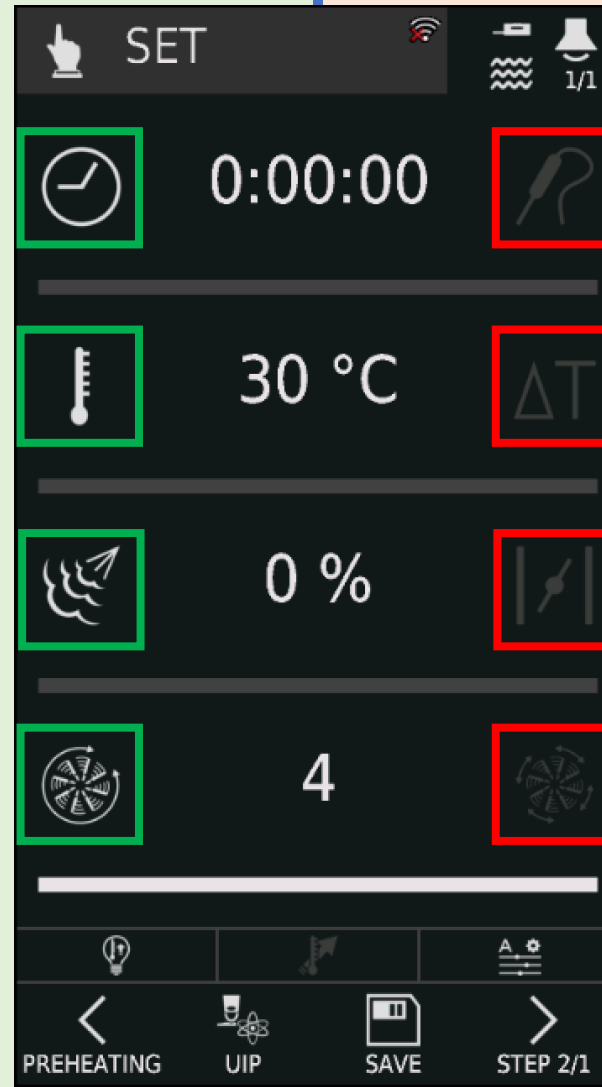

ADVANCED SETTINGS

Set the temperature you want to reach at the heart of the product using the probe.


Set the DELTA-T function, i.e. set the difference between the temperature at the core of the product and the cooking chamber temperature.

Set the humidity extraction percentage (dry climate).

Set the PULSED fan speed:
4: Pulsed very intense
3: Pulsed intense
2: Pulsed medium
1: Pulsed delicate


MANUAL FUNCTIONS

Set the time

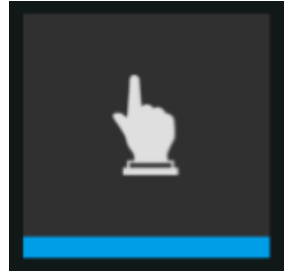

To set the duration of the cooking program, click on the clock symbol and use the slider to set the desired minutes. Use the " + and - " keys (img. 1) for more precision. You can change the length of the program only when the values are highlighted in **RED**.


You can also set HOURS and SECONDS by clicking on them.

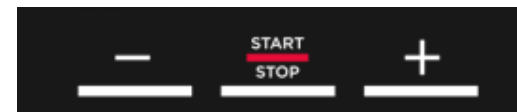


(img. 1)

MANUAL FUNCTIONS

Set the temperature

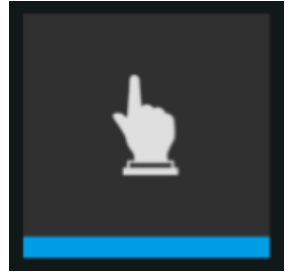


To set the temperature of the cooking program click on the thermometer symbol and use the slider to set the desired degrees (min. 30°C - max 260°C). Use the " + and - " keys (img. 1) for more precision. You can change the cooking temperature only when the values are highlighted in **RED**.

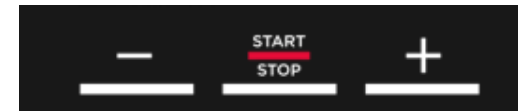

(img. 1)

MANUAL FUNCTIONS

Set the climatic conditions

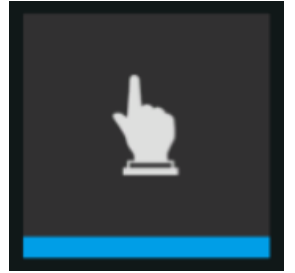

The DEFAULT setting is: 0%

0% means that the oven works in convection mode, that is, only moving the heat inside the cooking chamber, without adding or extracting humidity.

To ADD STEAM, click on the symbol:
and move the slider back and forth.



To EXTRACT HUMIDITY, click on the symbol:
and move the slider back and forth.




You can change the climatic conditions only when the values are highlighted in **BLUE** or **RED**.

Use the " + and - " keys for more precision.

MANUAL FUNCTIONS

Set the climatic conditions

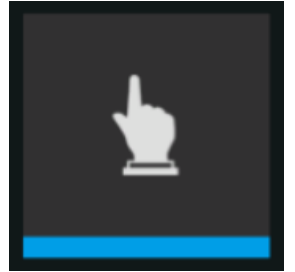

The DEFAULT setting is: 4.
4 means that the fan speed is set to maximum.


To reduce the fan speed click on the symbol
and move the slider back and forth.

You can change the climatic conditions only when the
values are highlighted in **RED**.

Use the " + and - " keys for more precision.

MANUAL FUNCTIONS

Starting the cooking program

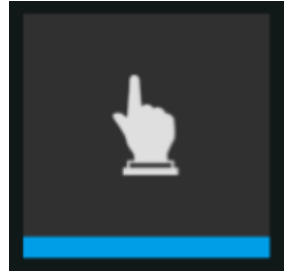


Once the program has been set, press the START/STOP key to start cooking.



NB. the oven will automatically preheat before warning you to proceed to insert the trays with an ACOUSTIC and VISUAL signal.

MANUAL FUNCTIONS


Saving a cooking program

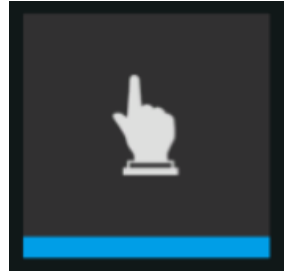

Once the program has been set, press the **SAVE** button to save the cooking program and no longer have to reinsert it in the future.




NB: It is also possible to store a program at the end of cooking pressing the **SAVE** button on the final screen:

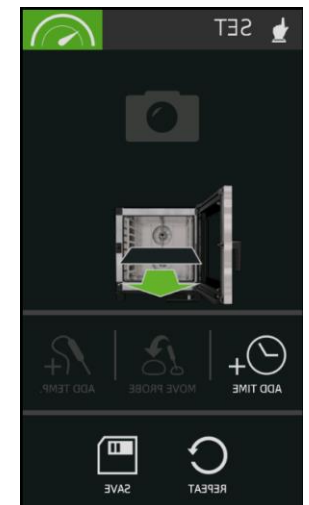

MANUAL FUNCTIONS

Saving a cooking program

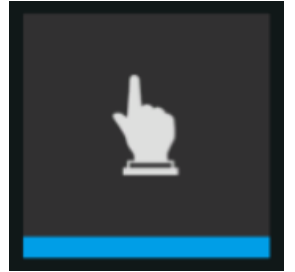

Name of the programme



Image of the programme





Tray to be used



Confirm storage


Confirm the storage of the program clicking the SAVE button and then select a free slot where to save it:

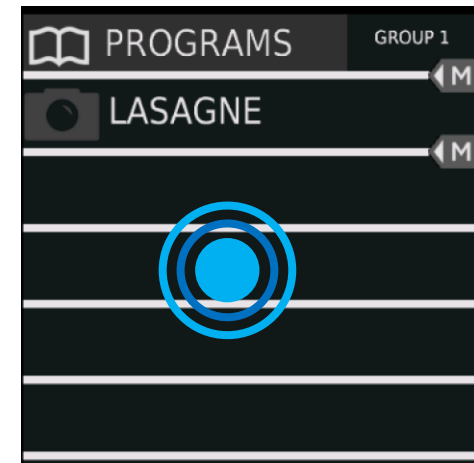

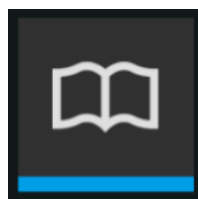

PERSONAL PROGRAMS LIBRARY


PERSONAL PROGRAMS LIBRARY

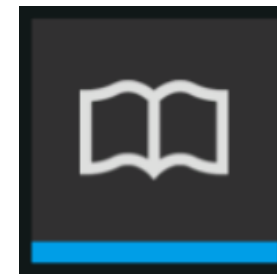


To access the library of stored personal programs, click the icon:



 
Then click on «MY PROGRAMS» to access the library.

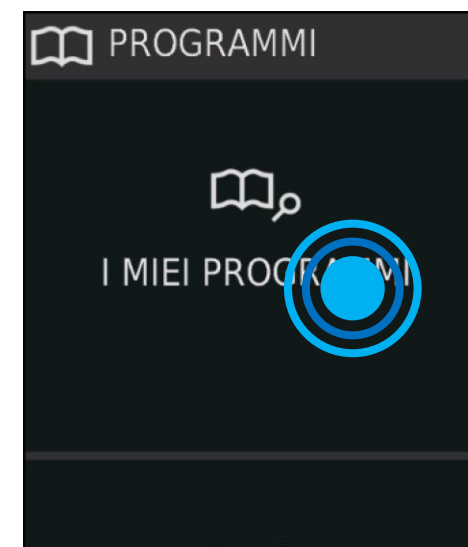


PERSONAL PROGRAMS LIBRARY

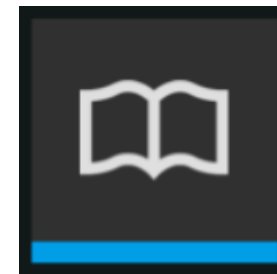

Select the desired program and press
START/STOP to start cooking.

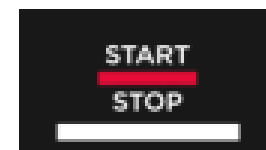


NB. the oven will automatically preheat before warning
you to proceed to insert the trays with an ACUSTIC and
VISUAL signal.

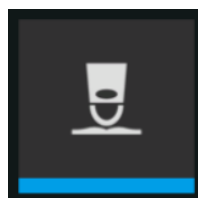


CHEFUNOX AUTOMATIC PROGRAMS

CHEFUNOX AUTOMATIC PROGRAMS

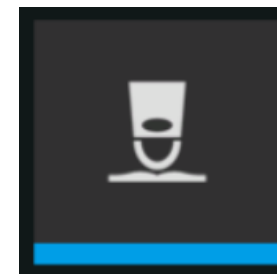


CHEFUNOX is the library of automatic programs by UNOX. Inside it, you will find cooking programs divided by type of food and cooking techniques.

Click on CHEFUNOX and select CHEFUNOX AUTOCOOK:

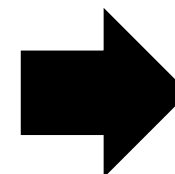

CHEFUNOX AUTOMATIC PROGRAMS

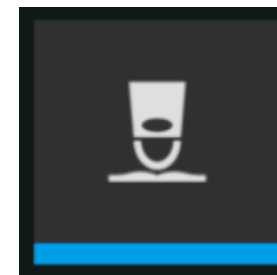



Once you have selected the food, move the slider to set the desired result.

Depending on the food, you will find sliders to determine:

- Food thickness,
- Initial food temperature,
- Internal cooking degree
- External colouring degree.

Once you have set everything, press START/STOP to start:

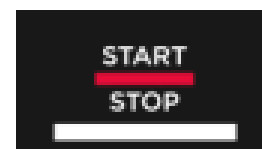

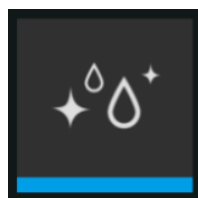

SENSE.KLEAN™

AUTOMATIC WASHING

SENSE.KLEAN™ AUTOMATIC WASHING



To wash the oven, click the SENSE.KLEAN icon and select your preferred washing among:


- RINSE (use only water)
- QUICK
- SHORT
- MEDIUM
- LONG
- SOFTENING (In case of particularly intense dirt, this "pre-washing" is recommended before the actual washing).



SENSE.KLEAN™ AUTOMATIC WASHING



«RECOMMENDED WASHING» icon

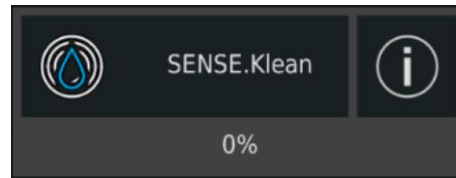


Percentage of dirt accumulation bar



Once the washing has been selected, make sure that the door is closed, that there is no temperature probe wire or other foreign body to prevent it from closing completely and press START/STOP to start it.

HOW TO HANDLE THE Det&Rinse DETERGENT

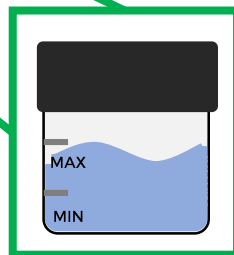

The DET&RINSE PLUS detergent is in the dedicated drawer tank underneath the oven.

It is possible to see the level of detergent in the tank directly from the front part via the Window. The detergent level must always be between "MIN" and "MAX".

If the detergent tank does not contain enough detergent, a warning will appear directly on the control panel.




HOW TO HANDLE THE Det&Rinse DETERGENT



Unscrew the cap, but DO NOT REMOVE the aluminium tab from the bottle.

Do not try to fill the detergent tank using a funnel or other tools. It is not necessary.

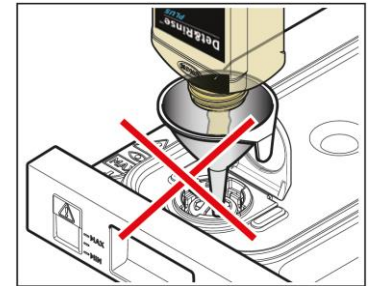

Lift the lid of the detergent tank and screw the bottle on it. The coupling system will allow you to automatically pierce the safety tab and hold the bottle in a vertical position until it is completely emptied without the need for manual support.

Fill the drawer with one or more bottles until the detergent reaches the "MAX" level.

HOW TO HANDLE THE Det&Rinse DETERGENT



Det&Rinse is the only certified cleaning agent for the CHEFTOP and BAKERTOP MIND.Maps™ ovens.

More info can be found on the **Det&Rinse** label and package.

Connect to www.unox.com webpage and discover all the news and updates.